

# Transmitter Help Guide

## AUX3 (Flip Over/Turtle Mode)

Up: flip over mode  
Down: normal flight

## AUX4 (Beeper)

Up: beeper on  
Down: beeper off

## AUX1

Up: drone disarmed  
Middle: drone disarmed  
Down: drone armed

## AUX2

Up: angle (beginner)  
Middle: horizon (intermediate)  
Down: rate (expert)

## Left Stick

Up/Down: Throttle - changes altitude of drone

Left/Right: Yaw - changes direction the drone faces

## Right Stick

Up/Down: Pitch - moves drone forward and backward

Left/Right: Roll - moves drone left and right

## Trim Throttle

L1+, L2-

## Trim Yaw


L3-, L4+

## Trim Pitch

R1+, R2-

## Trim Roll

R3-, R4+

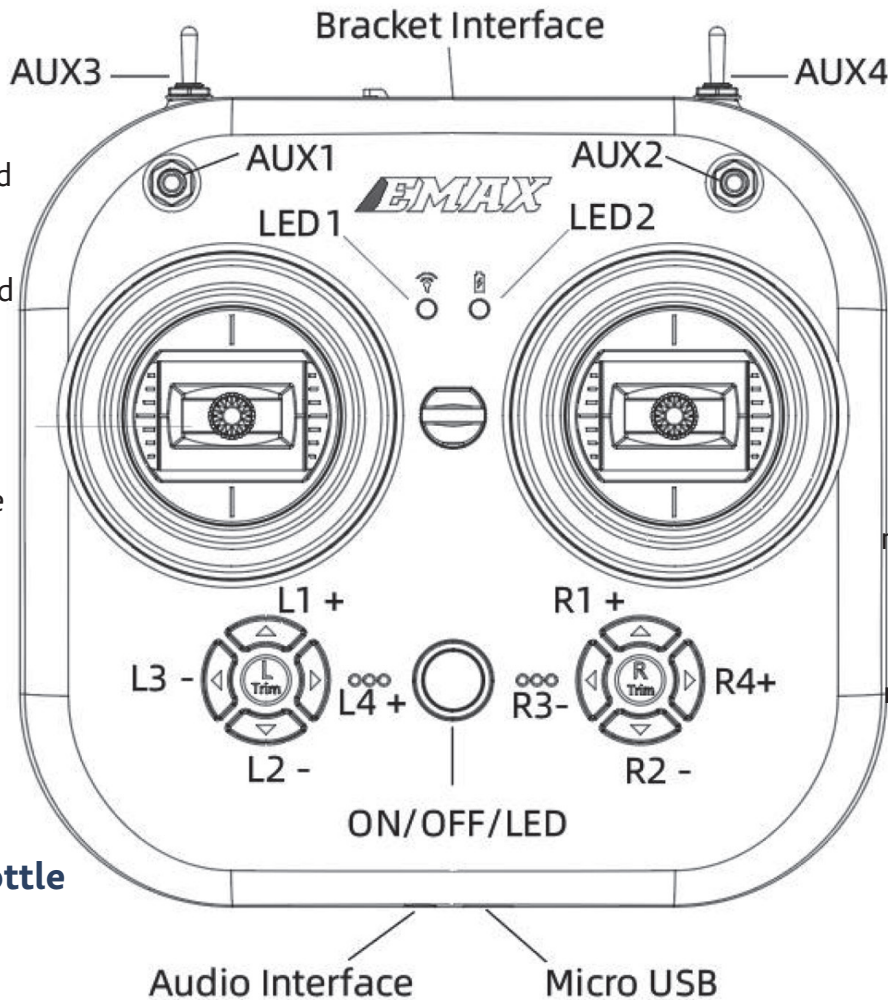

## Steps for Arming Drone

1. Put AUX1 in the up position
2. Push Throttle/Left Stick fully down
3. Move AUX1 to the down position